



Tent Pitching Instructions Banshee 200 & 300

Flysheet First Pitching

1. Assemble poles and lay them on the ground parallel - 2 poles – 1 x long pole and 1 x shorter pole.
2. Open flysheet on ground and position tent in desired direction. Make sure the doors are completely closed.
3. Locate pole sleeves on flysheet and insert poles.
4. On one side, locate the end of each pole into corresponding eyelets on pole anchor straps.
5. On opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
6. Peg out elastic at both corners of one end of tent using pin pegs supplied.
7. Pull flysheet from other end, away from end pegged points, until tent takes shape. Peg the opposite two elastics.
8. Peg down remaining pole anchor straps and pegging points.
9. Attach clips to poles.
10. Peg out all guylines.

Inner

1. Open out inner and position doorway to correspond with the flysheet door(s).
2. Hang the inner by passing the toggles through the plastic rings. Attach the clips at the base of the inner to the flysheet.
3. Hang the gear loft at the inner's apex using the toggles and rings.